

CURV-O-MARK CONTOUR PIPE MARKERS



- CENTER HEAD STANDARD -



- CENTER HEAD JUMBO -



- DIAL AND LEVEL -



- CENTER PUNCH -

CURV-O-MARK CENTER HEAD STANDARD

CENTER HEAD STANDARD (#14775)

The centering head aids in the setting of centre lines, establishing angles and marks, for butt-ins, locating points inside pipes and tanks, laying out keyways and measuring declivity. The standard model is used on pipe 1/2" diameter and larger and is fitted with an adjustable dial set level and a manually operated hardened centering pin.



CENTER HEAD JUMBO (#14776)

This model is used on pipe 1" diameter and larger and is fitted with an adjustable dial set level and a spring-loaded hardened centering pin which eliminates the need for a hammer. Just make the alignment and press the trigger.

DIAL AND LEVEL (#14797)

The DSL is an adjustable bubble protractor used with a number of Curv-O-Mark tools (see the related product links). The protractor covers 180 degrees through two 90 degree quadrants, reading in 2-1/2 degree increments. The bubble is cast in the aluminum dial.

SPECIFICATIONS

Item no.	Type	Jackson item no.	Jackson Sku. no.
35170210	CENTER HEAD STANDARD	J1879	14775
35170225	CENTER HEAD JUMBO	J1880	14776
35170280	DIAL AND LEVEL	J1905	14797
35170290	CENTER PUNCH	J1906	14798